


### **SG FLASH GPIB UPDATER INSTRUCTIONS**

1. Connect an RS232 cable from PC into the RS232 connector on the back of the SG unit. Power on SG Unit.
2. Open the SG Flash Upgrade Utility program.

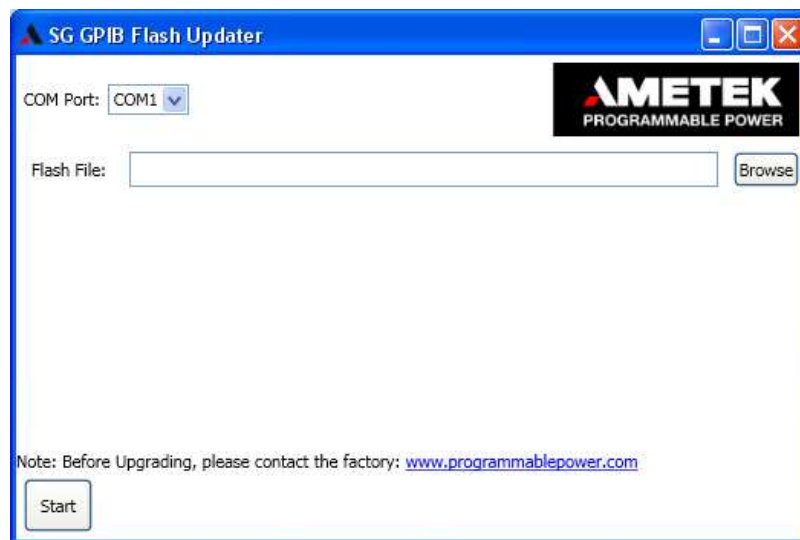

3. In the SG Flash Upgrade Utility window select the proper COM Port to be used by clicking the drop down box.
4. Next to the "Flash File:" click "Browse" and load the needed Master firmware ".abs" file.
5. Click "Start" at the bottom of the window. Wait until update completes. Cycle power to the unit.

